

SAFETY REMINDERS & OTHER USEFUL TIPS

1. This machine is not a toy, therefore children should not be allowed to operate it.
2. Make sure your **Omega-4in1** is placed on top of a sturdy surface before use & that the electrical chord is securely attached to a wall outlet (110V).
3. Keep hair, fingers, jewelry and all loose clothing away from all moving parts of your **Omega-4in1** as they may accidentally be pulled into the machine causing damage to it or worse, injury to the user.
4. Never operate your machine near water or any type of liquid to reduce the risk of electric shock.
5. Periodically check the electrical chord of your **Omega-4in1** for any visible sign of damage and avoid using it when it is present.
6. Use a test sheet to punch to determine if there will be any holes running off the sides and disengage the appropriate pins.
7. Do not punch more than 20 sheets of 20lb. paper when punching. Preferably, punch no more than 12-15 sheets at a time to help extend the life of your **Omega-4in1**.
8. When punching on PVC or PP covers, it is recommended that you punch at a maximum of 2 sheets at a time.
9. Periodically check and empty the waste drawer. An overfilled waste drawer may damage the machine when punching.
10. Protect your **Omega-4in1** keeping it from the elements such as water or excessive heat.
11. **Omega-4in1** should not be used other than its intended purpose and function.
12. Always call the authorized dealer first for technical issues or any malfunction. Trying to fix the machine by yourself might not only be dangerous, but may also void the warranty.

WARRANTY INFORMATION

This machine is guaranteed against defects in materials and workmanship for a period of one year from the date of original purchase from an authorized dealer of TAMERICA PRODUCTS, INC. If you perceive or experience any issue with the machine, kindly report it to the dealer within 10 business days of said purchase to avail of free pickup and redelivery from TAMERICA's Service Center. After the first 10 days, you will either receive service instructions and parts via mail free of charge for the duration of the warranty.

Note that when returning the machine for warranty claims, the machine should be returned in its complete original packaging to avoid incidental or consequential damages that may void the claim. A copy of the invoice or other proof of purchase also needs to be sent with the machine.

Upon evaluation of the machine and the determination of the actual defect, the machine will be restored to its regular working condition by the Service Center and shipped back to you free of charge. If you change your mind and simply want to return the machine, a 20% restocking fee is charged even within the 10-day grace period. Further, you will have to cover freight to return the machine and it has to be in brand-new resalable condition, otherwise, you might incur more charges.

This warranty covers all defects incurred in the normal use of the equipment except in the following cases:

- Loss or damage to the equipment due to improper operation, abuse, mishandling or failure to follow the operating instructions.
- Removal or alteration of the serial number.
- The machine being serviced or modified by anyone other than a certified technician authorized by TAMERICA.

This warranty is valid only within the 48 Contiguous States, Hawaii and Alaska excluded.



OMEGA-4IN1 Punch & Bind Machine w/Interchangeable Dies




OPERATING MANUAL


IMPORTANT !!!

It will be beneficial to first get yourself acquainted with the features of your Omega-4in1 before attempting to use. Keep in mind all operational instructions, tips, and safety reminders every time you use your Omega-4in1 to best achieve desirable results.


WIRE BINDING

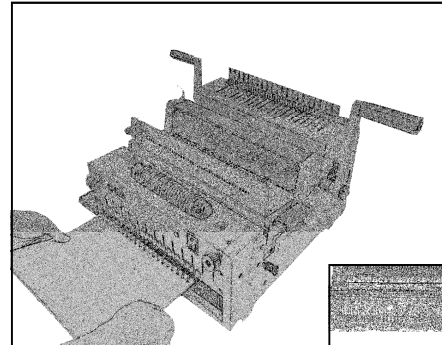

1. Select the right wire binding size and securely position it on wire holder (inset.) Insert your document onto the wire carefully aligning the holes with the loops.

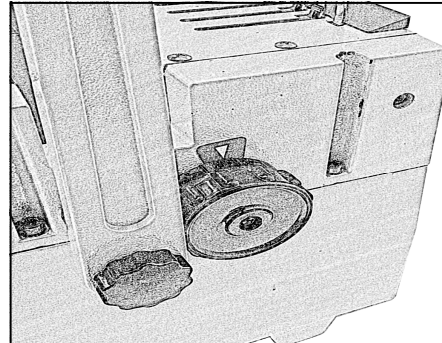


2. Turn the wire size selector dial to match the size of the wire.

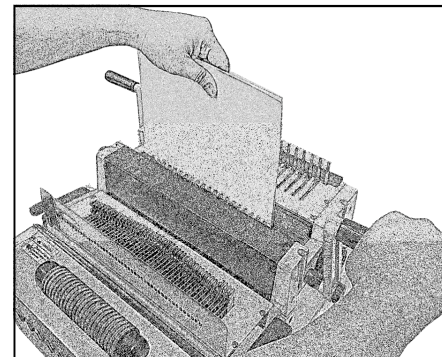


3. Pull the wire closer handle down to bind the document & make sure to push the handle back to its original position afterwards to secure the document.

NOTE: Periodically check and empty the waste drawer to help ensure uninterrupted use and to avoid damage to the machine.


COMB BINDING

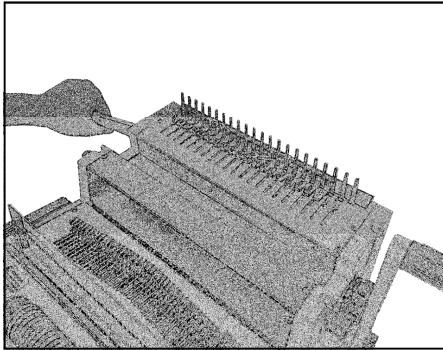

1. Select the right binding comb and lay on the comb spreader. Gently pull on comb spreader handle to open.

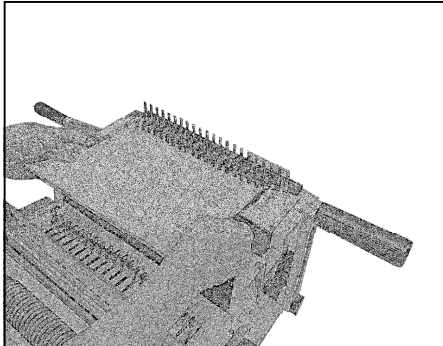


2. Insert your document into the comb by carefully aligning the holes with all the loops.

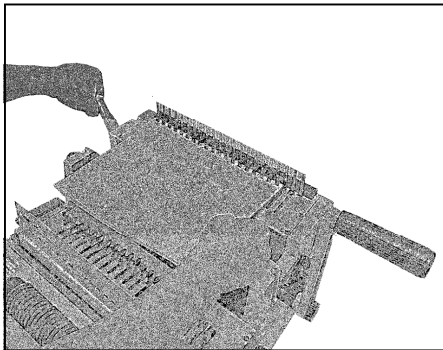

3. Push handle back to its original position to close the comb and to secure the document.


FEATURES

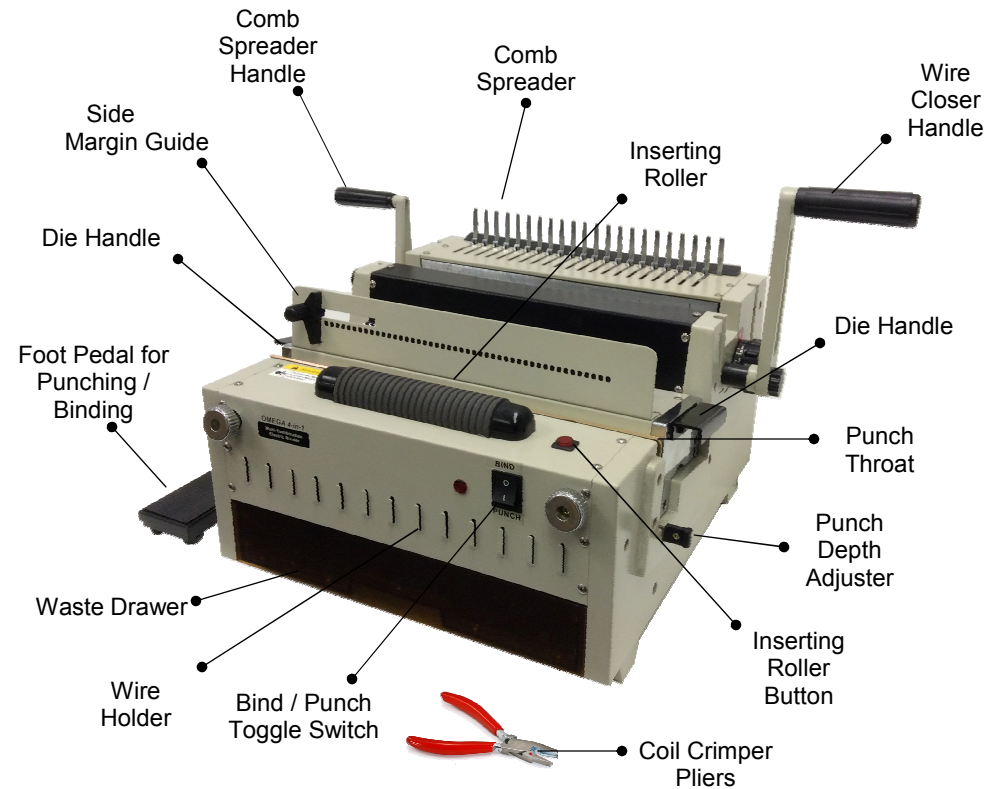


SPECIFICATIONS

- Punch type: Coil 4:1 and 3:1 wire
- Punch method: Manual
- Max. punching capacity: 20 sheets
- Max. binding capacity for wire: 120 sheets
- Max. binding capacity for coil: 220 sheets
- Max. punching length: A3
- Paper load: Vertical & Horizontal
- Usage: Moderate
- Disengageable pins: Yes
- Punch depth control: Adjustable
- Edge guide: Yes
- Binder: Coil inserter and wire closer
- Net weight: 55lbs
- Gross weight: 60 lbs
- Shipping dims: 23" x 21" x 15"
- Warranty: 1 year

 
MACHINE OPERATION

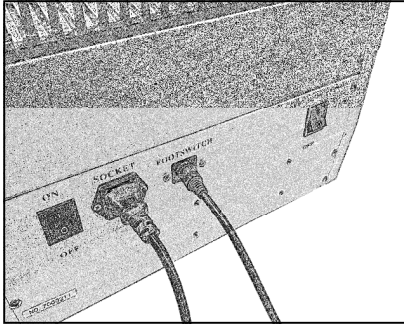


1. Attach the foot pedal and power cord to the machine then push the toggle switches to the “on” position. .

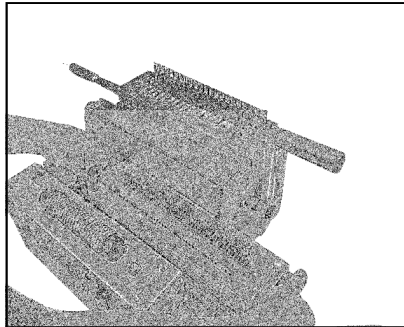 


3. Grab the die by its handles to slide out of machine and replace with desired die. Make sure to secure with the locking pins by turning the knobs clockwise.

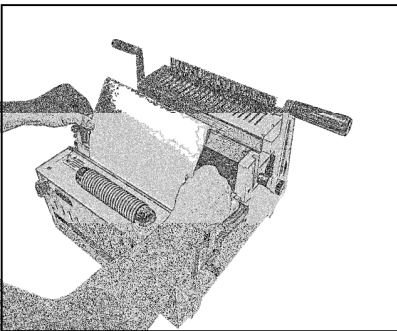


5. Place your document on the punch throat and adjust side margin guide according to the size of the document &/or the ruler guide.

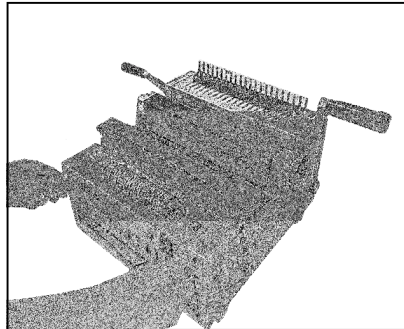

2. The machine comes with a pre-installed die. To swap out, unlock the locking pins by turning the knobs counter-clockwise.

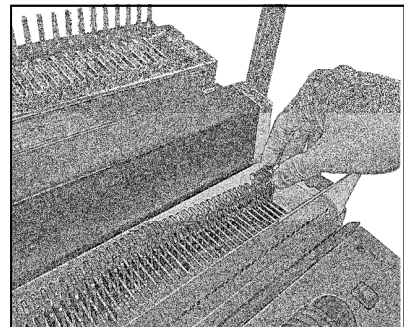


4. Disengage pins that would punch off the edge of the document by pulling them outwards.

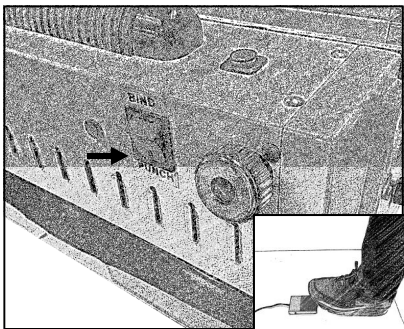


6. Select “punch” on the toggle switch and press foot pedal to punch holes on your document.


COIL BINDING

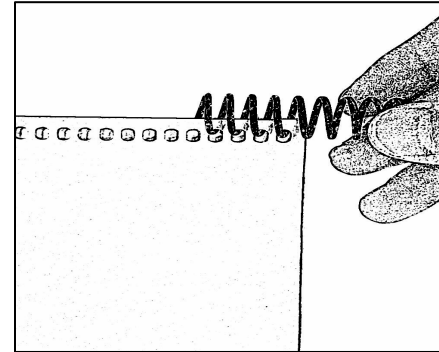


1. Select the right coil size and manually insert into the first 4 or 5 holes.

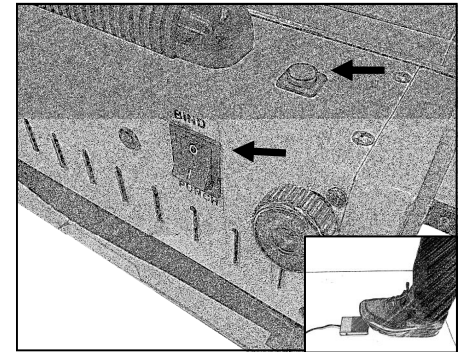

2. Select “bind” on the toggle switch and press on foot pedal or inserting roller button to activate the roller.

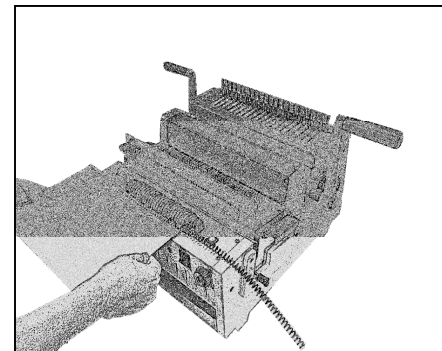

3. Gently press the coil against the inserting roller by holding the document with 2 hands.

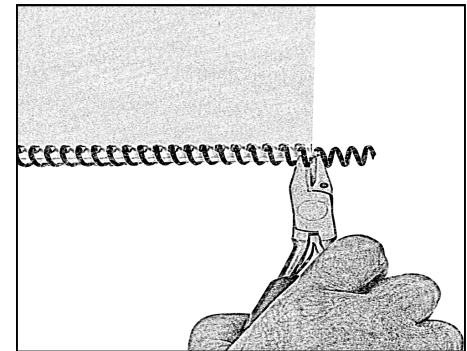

4. Crimp the ends using the hand-held coil crimper pliers to keep the document from unbinding. Hold pliers as shown (red dot should be facing you.)