





TCC-6000 LAMINATOR PARTS MANUAL

<b>DRAWING NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>DRAWING NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
001	3H1-B1	CONTROL PANEL	023	3H1-D14	HOOK PLATE (BACK)
001-1	3H1-B1-1	AL PLATE	024	3H1-D14-1	HOOK PLATE (FRONT)
002	3LM-B3	BUSH	024-1	3H2-D14-2	HOOK PLATE (MIDDLE)
003	3H1-B5	FRONT ROLLER (UPPER)	025	3H1-D15A	MOTOR RACK
003-1	3H1-B5A	MIDDLE ROLLER (UPPER)	026	3H1-D16	SWITCH RACK
004	3H1-B6	FRONT ROLLER (LOWER)	027	3H1-D17	HEAT-RESIST PLATE
004-1	3H1-B6A	MIDDLE ROLLER (LOWER)	028	3H2-D19	CHAIN GEAR
005	3H1-B7	REAR ROLLER (LOWER)	029	3H2-D19-1	CHAIN GEAR
006	3H1-B8	REAR ROLLER (UPPER)	030	3H2-D19-2	CHAIN GEAR
007	B-9	FOOT PAD	031	3H2-D20	RACK
008	3H2-D1	BASE BOARD	032	3H1-D21	SMALL GEAR
009	3H1-D4	TOP COVER	033	3H1-D22	BIG GEAR
017	3H1-D9	REAR PLATE	034	3LM-D24	SPRING
018	3H1-D10	PRESSURE PLATE	035	3H1-D27	FIXED PLATE
019	3H2-D11A	BRACKET (L)	036	3H1-D28	Cu BUSH
020	3H2-D12	BRACKET(R)	037	3H1-D29	BUSH
021	3H1-D13	HOOK PLATE (BACK)	038	3H1-D30	THERMO SET
022	3H1-D13-1	HOOK PLATE (FRONT)	039	3H1-D31	PANEL RACK
022-1	3H2-D13-2	HOOK PLATE (MIDDLE)	040	3H1-D32	FAN RACK

TCC-6000 LAMINATOR PARTS MANUAL

<b>DRAWING NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>DRAWING NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
041	3H1-D33	THERMO PLATE	058	D266E	LINE E
042	3H1-D34	CHAIN	059	D266G	LINE G
042-1	3H1-D34-1	CHAIN	060	D266H	LINE H
043	3H1-P3	PCB-A	061	D266I	LINE I
043-1	3H1-P3-1	PCB-B	062	D266J	LINE J
043-2	3H1-P3-2	WIRE HARNESS CABLE	064	3H1-P15	TRANSFORMER
044	3H1-P4	SOCKET	050	3H1-P9	SILICON PAD
046	3H1-P6	DC MOTOR	051	3H1-P10	FAN
HT-F	3H1-PF	HEATER SET	052	3H1-P11	BAKELITE SHEET
	3H1-P8	QUARTZ TUBE	053	3H1-P12	SENSOR WIRE
	3H1-P8-1	QUARTZ TUBE CAP	054	3H1-P13	CUT-OFF FUSE
	3H1-P8-2A	HEATER	055	SP-1	POWER S.W.
	3H1-P8-3A	FIXED SCREW	056	3H1-P14	3055
	3H1-P8-3B	FIXED SCREW	057	D266A	LINE A
HT-M	3H1-PM	HEATER SET			
	3H1-P8	QUARTZ TUBE			
	3H1-P8-1	QUARTZ TUBE CAP			
	3H1-P8-2AA	HEATER			
	3H1-P8-3A	FIXED SCREW			
	3H1-P8-3B	FIXED SCREW			